



54–565 Removal and installation of control unit

Removal


- 1 Remove cover under instrument panel on driver's side.
- 2 Remove plug coupling from control unit (2) and from bracket.
- 3 On vehicles with automatic transmission unscrew control unit (2) with holder from pedal bearing bracket. Then remove control unit (2) from holder.

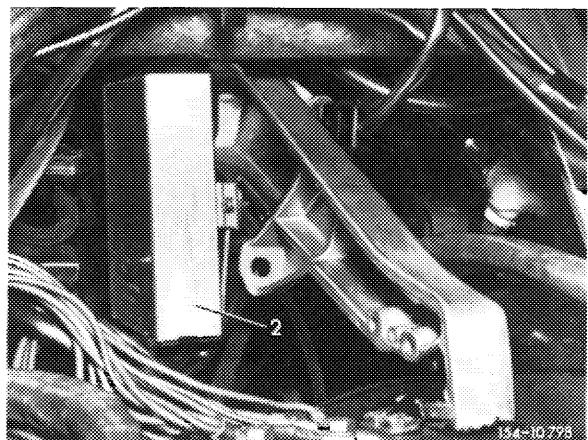


Model 107 and 1st version model 116

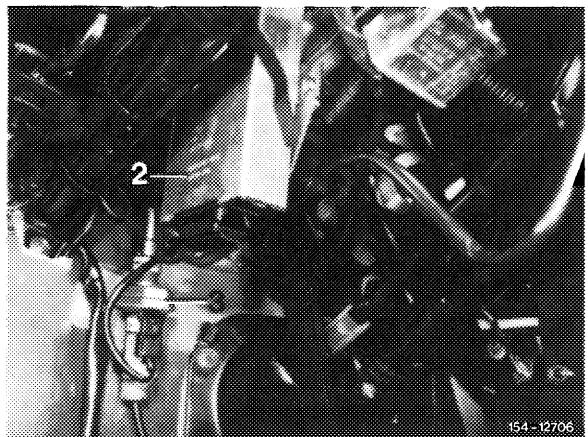


Models 114, 115

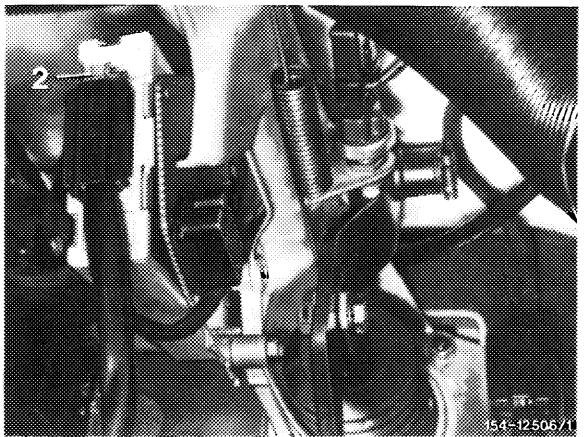

2nd version model 116

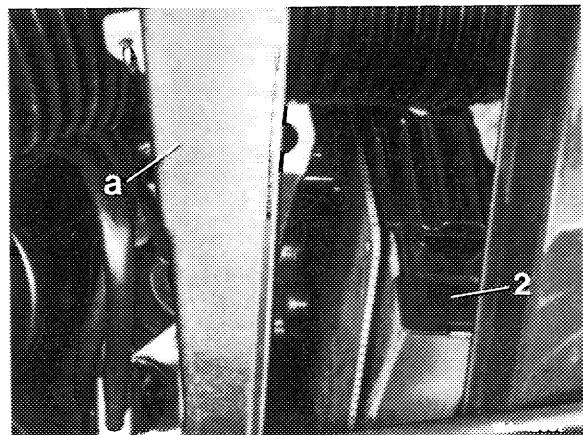


Model 116 righthand steering
a Pedal bearing bracket

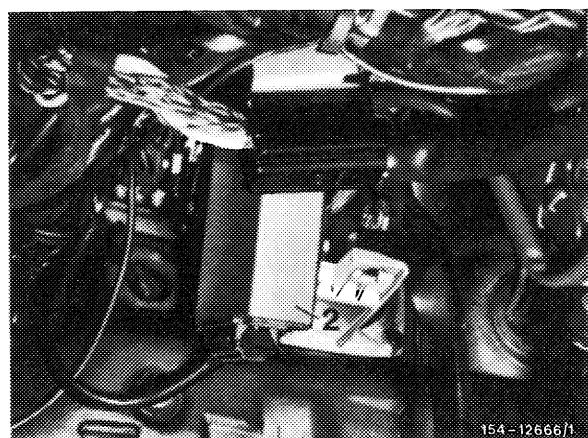

Model 123
with automatic transmission

4 On vehicles with manual transmission, unscrew control unit from holder of cover.

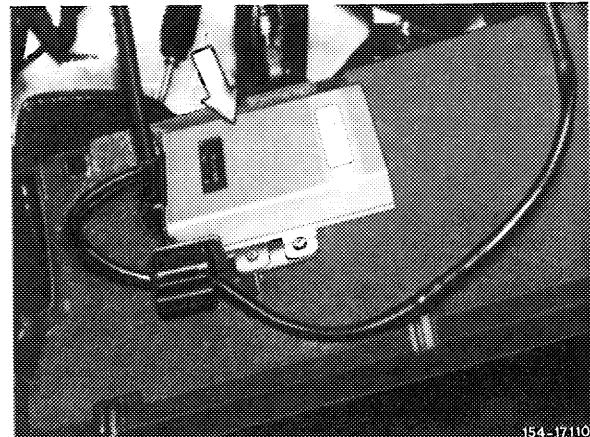

Model 123 with manual transmission

Installation

5 During installation of a new control unit (part No. 005 545 12 32) on vehicles up to approx. March 1976, the red line 0.75 mm² from cruise control/Tempomat switch (jack 2) to control unit (jack 5) must be retrofitted. The line serves for voltage supply of electronic system in control unit.

6 For installation proceed vice versa.

7 Perform function test on road.

